

+

4/13





FIG. 4A








FIG. 4C





FIG. 4D

+

8/13

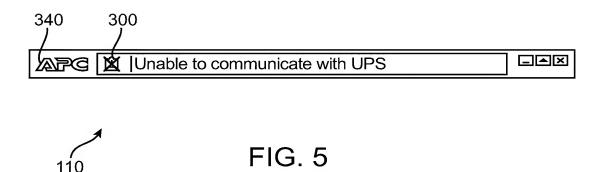

+

9/13

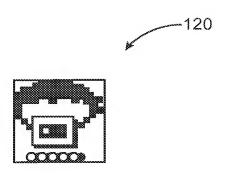


FIG. 6

+ 10/13

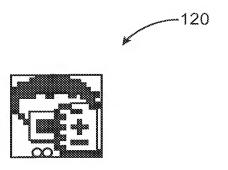


FIG. 7

11/13

+

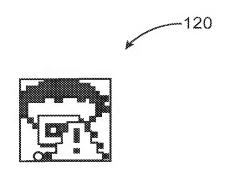


FIG. 8

① Unable to communicate with APC battery backup. Please check that the USB cable between your battery backup and PC is properly connected.



360

FIG. 9

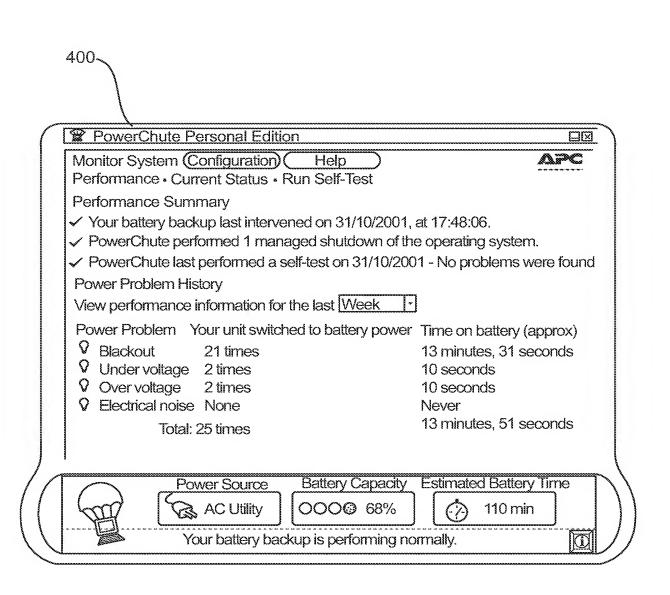


FIG. 10